



Spare Parts	
No.	Name
1	Solenoid Valve
2	Control Valve
3	Copper Pipes
4	O Ring (*67*φ2.65)
5	Connecting Rob
6	Ball Bear 6202-2Z
7	Seal Plate
8	O Ring (*26.7*φ1.8)
9	Seal Ring
10	O Ring (*34.6*φ1.8)
11	Seal Board
12	Motor
13	Running Capacitor
14	Starting Capacitor
15	Motor Gear
16	Ball Bear
17	Gear Shaft
18	Fan
19	Fan Cover
20	Base
21	O Ring (*30*φ1.8)
22	Piston Ring
23	Piston Ring Plate
24	Screw(M5x14, Stainless steel)
25	Cylinder
26	O Ring (*30*φ1.8)
27	Intake Valve Core
28	Valve Seat
29	Intake Valve Spring
30	O Ring (*10.8*φ1.8)
31	Exhaust Valve Core
32	Exhaust Sping
33	O Ring (*32.5*φ1.8)
34	Cylinder Cover
35	High Pressure Switch(Manual)
36	Input Gauge
37	Circuit Breaker
38	Power Switch
39	Output Gauge
40	Aluminum Knob