
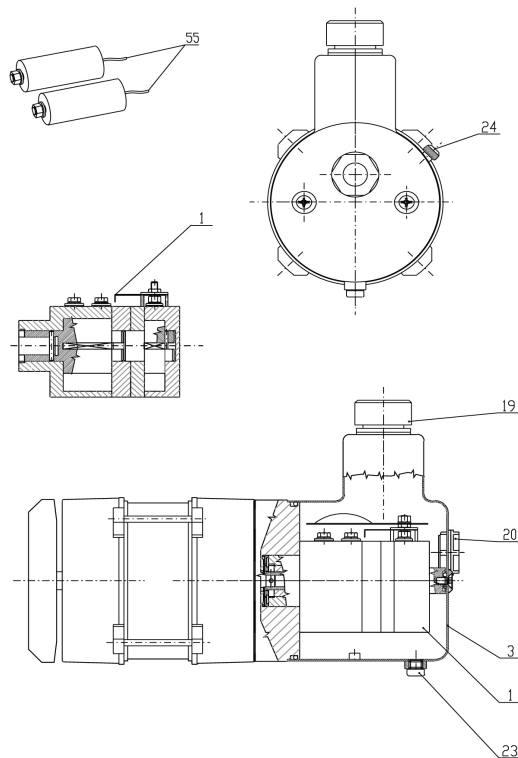


Spare Parts for RL-2, RL-4 and RL-8

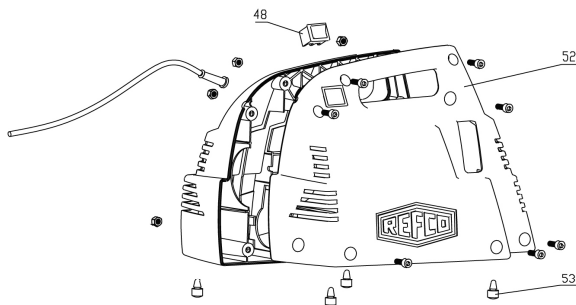

Spare Parts for RL-2

Pos.	Designation	Description	Part No.
3	RL-2-3000	Oil basin complete with gasket	4661589
20	RL-2-3011	Oil sight glass with gasket + counter nut	4661597
19	RL-2/4-303	Oil mist filter with gasket	4495471
24	RL-2/4-3060	gas ballast valve complete	4661423
53	RL-8-4071	rubber pad set (4 pieces)	4507631
55	RL-2-406	Capacitor	4661040
48	RL-4-415	Switch	4496770
52	RL-2-4000	Housing complete	4661538
1	RL-2-2A	Vacuum stage complete	4661482
64	RL-2-64	Intake port w/cap	4668028

Spare Parts for RL-4

Pos.	Designation	Description	Part No.
3	RL-4-3000	Oil basin complete with gasket	4507674
20	RL-4-3011	Oil sight glass with gasket + counter nut	4507682
23	RL-4/8-310	Oil drain plug with gasket	4496761
19	RL-2/4-303	Oil mist filter with gasket	4495471
24	RL-2/4-3060	Gas ballast valve complete	4661423
53	RL-8-4071	Rubber pad set (4 pieces)	4507631
55	RL-4-406	Capacitor	4505051
48	RL-4-415	Switch	4496770
52	RL-4-4000	Housing complete	4661474
1	RL-4-2A	Vacuum stage complete	4661954
64	RL-4-64	Intake port w/cap	4668036
65	RL-4/8-65	Intake elbow	4668053

Spare Parts for RL-8

Pos.	Designation	Description	Part No.
3	RL-8-3000	Oil basin complete with gasket	4507607
20	RL-8-3011	Oil sight glass with gasket + counter nut	4507615
23	RL-4/8-310	Oil drain plug with gasket	4496761
19	RL-8-303	Oil mist filter with gasket	4507445
24	RL-8-3060	Gas ballast valve complete	4507623
53	RL-8-4071	Rubber pad set (4 pieces)	4507631
55	RL-4-426	Capacitor	4508203
48	RL-4-415	Switch	4496770
52	RL-8-4000	Housing complete	4507640
1	RL-8-2A	Vacuum stage complete	4507658
64	RL-8-64	Intake port w/cap	4668045
65	RL-4/8-65	Intake elbow	4668053